

Assemblage



Attach the Rifix lower part by threading the right part of the backpack's waist belt through the loops on both sides of the Rifix lower part.

If the loops are too narrow the buckle of the waist belt may need to be temporarily dissembled before.



Open the Velcro tape on the Rifix upper part and place the left shoulder strap of the backpack (right hand shooter) in the middle of the gripper.



Take the side of the gripper mounted with the buckle and insert it through the other side of the gripper in order to seal the Velcro tape.



Put on the backpack in order to position the Rifix upper part correctly. The higher up that the weapon is positioned the more stable the rifle sits. Attach the vertical strap to the backpack's upper adjustment strap by opening the buckle on the vertical strap and thread it around the adjustment strap to lock the buckle.



Pull the Velcro tape gripper on the Rifix upper part around the shoulder strap so that the hole (shown in the middle of the picture) is visible. Run the locking strap with the buckle through the hole and click it together.



Assemble the horizontal chest strap by putting the Velcro tape locker around the opposite shoulder strap of the backpack.



Run the Velcro tape strap through the hole on the counter side. Adjust so that the buckle is in the same position as the upper part of the backpack's left shoulder strap. Tighten and close the Velcro tape.

Administration



Put on the backpack and close the waist belt. Position the Rifix lower part over the backpack's waist belt buckle. Tighten the waist belt to assure that the weapon is being held up over your groins.



Attach the Rifix horizontal chest strap to the Rifix upper part with the aid of the buckle. Tighten the vertical strap for comfort.



Open the locking straps of the Rifix upper and lower parts and place the gun stock in the lower part and the rifle's fore stock in the upper part.



First close the buckle of the upper part and then the lower part for easiest fixation.



Further adjust the fixation of the rifle by tightening the backpack's waist, shoulder, and chest straps. The rifle shall be tightly fitted to the body.

PLEASE NOTE!

The buckles shall solely be opened when the hunter is in an upright position. All handling of rifles and usage of Rifix together with rifles is at the users own risk. For safety reasons we do not recommend to have the rifle loaded when handling Rifix.

If you have any feedback on new features and improvements, please contact us!

www.rifix.se, info@rifix.se, +46 647-710 50

Rifix[®]
RIFLE FIXATION

